

# Фрезы для обработки легких сплавов со сферическим торцом

Цилиндрический хвостовик

 
 


Схема	Обозначение	D	l	L	d	z
	Короткая серия					
	СЛ 657-2-6-39-С3	2	6	39	3	2
	СЛ 657-3-7-39-С3	3	7	39	3	2
	СЛ 657-4-8-51-С4	4	8	51	4	2
	СЛ 657-5-10-51-С5	5	10	51	5	2
	СЛ 657-6-10-58-С6	6	10	58	6	2
	СЛ 657-8-16-64-С8	8	16	64	8	2
	СЛ 657-10-19-73-С10	10	19	73	10	2
	СЛ 657-12-22-84-С12	12	22	84	12	2
	СЛ 657-16-26-93-С16	16	26	93	16	2
	СЛ 657-18-26-93-С18	18	26	93	18	2
	СЛ 657-20-30-105-С20	20	30	105	20	2
	Длинная серия					
	СЛ 658-2-10-50-С3	2	10	50	3	2
	СЛ 658-3-12-50-С3	3	12	50	3	2
	СЛ 658-4-12-80-С4	4	12	80	4	2
	СЛ 658-5-15-80-С5	5	15	80	5	2
	СЛ 658-6-15-80-С6	6	15	80	6	2
	СЛ 658-8-20-100-С8	8	20	100	8	2
	СЛ 658-10-22-100-С10	10	22	100	10	2
СЛ 658-12-26-100-С12	12	26	100	12	2	
СЛ 658-16-33-100-С16	16	33	100	16	2	
СЛ 658-18-33-100-С18	18	33	100	18	2	
СЛ 658-20-42-105-С20	20	42	105	20	2	
Группа применения						
P	M	K	N	S	H	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
ТУ 25.73.40-036-36293294-2019						