

Фрезы универсальные

Конический хвостовик и перекрытый центр





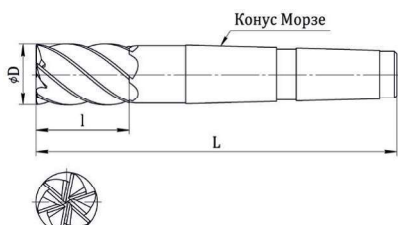
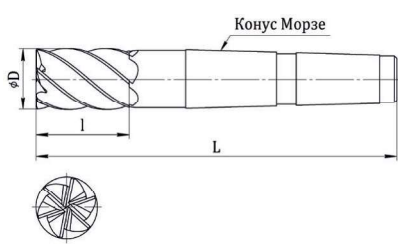
Схема	Обозначение	D	l	L	KM	z
	С нормальным зубом					
	УК 514-10-22-92-KM1	10	22	92	1	4
	УК 514-11-22-92-KM1	11	22	92	1	4
	УК 514-12-26-96-KM1	12	26	96	1	4
	УК 514-12-26-111-KM2	12	26	111	2	4
	УК 514-14-26-96-KM1	14	26	96	1	4
	УК 514-14-26-111-KM2	14	26	111	2	4
	УК 514-16-32-117-KM2	16	32	117	2	4
	УК 514-18-32-117-KM2	18	32	117	2	4
	УК 514-20-38-123-KM2	20	38	123	2	5
	УК 514-20-38-140-KM3	20	38	140	3	5
	УК 514-22-38-123-KM2	22	38	123	2	5
	УК 514-22-38-140-KM3	22	38	140	3	5
	УК 514-25-45-147-KM3	25	45	147	3	5
	УК 514-28-45-147-KM3	28	45	147	3	5
	УК 514-28-45-170-KM4	28	45	170	4	5
	УК 514-30-53-155-KM3	30	53	155	3	5
	УК 514-30-53-178-KM4	30	53	178	4	5
	УК 514-32-53-155-KM3	32	53	155	3	6
	УК 514-32-53-178-KM4	32	53	178	4	6
УК 514-36-53-155-KM3	36	53	155	3	6	
УК 514-36-53-178-KM4	36	53	178	4	6	
УК 514-40-63-188-KM4	40	63	188	4	6	
УК 514-40-63-221-KM5	40	63	221	5	6	
УК 514-45-63-188-KM4	45	63	188	4	6	
УК 514-45-63-221-KM5	45	63	221	5	6	
УК 514-50-75-200-KM4	50	75	200	4	6	
УК 514-50-75-233-KM5	50	75	233	5	6	
УК 514-56-75-200-KM4	56	75	200	4	8	
УК 514-56-75-233-KM5	56	75	233	5	8	
УК 514-63-90-248-KM5	63	90	248	5	8	

Схема	Обозначение	D	l	L	KM	z
	С крупным зубом					
	УК 515-10-22-92-КМ1	10	22	92	1	3
	УК 515-11-22-92-КМ1	11	22	92	1	3
	УК 515-12-26-96-КМ1	12	26	96	1	3
	УК 515-12-26-111-КМ2	12	26	111	2	3
	УК 515-14-26-96-КМ1	14	26	96	1	3
	УК 515-14-26-111-КМ2	14	26	111	2	3
	УК 515-16-32-117-КМ2	16	32	117	2	3
	УК 515-18-32-117-КМ2	18	32	117	2	3
	УК 515-20-38-123-КМ2	20	38	123	2	3
	УК 515-20-38-140-КМ3	20	38	140	3	3
	УК 515-22-38-123-КМ2	22	38	123	2	3
	УК 515-22-38-140-КМ3	22	38	140	3	3
	УК 515-25-45-147-КМ3	25	45	147	3	3
	УК 515-28-45-147-КМ3	28	45	147	3	3
	УК 515-28-45-170-КМ4	28	45	170	4	3
	УК 515-30-53-155-КМ3	30	53	155	3	4
	УК 515-30-53-178-КМ4	30	53	178	4	4
	УК 515-32-53-155-КМ3	32	53	155	3	4
	УК 515-32-53-178-КМ4	32	53	178	4	4
	УК 515-36-53-155-КМ3	36	53	155	3	4
	УК 515-36-53-178-КМ4	36	53	178	4	4
	УК 515-40-63-188-КМ4	40	63	188	4	4
	УК 515-40-63-221-КМ5	40	63	221	5	4
УК 515-45-63-188-КМ4	45	63	188	4	4	
УК 515-45-63-221-КМ5	45	63	221	5	4	
УК 515-50-75-200-КМ4	50	75	200	4	4	
УК 515-50-75-233-КМ5	50	75	233	5	4	
УК 515-56-75-200-КМ4	56	75	200	4	5	
УК 515-56-75-233-КМ5	56	75	233	5	5	
УК 515-63-90-248-КМ5	63	90	248	5	5	
Группа применения						
P	M	K	N	S	H	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
ТУ 25.73.40-044-36293294-2019						

Фрезы универсальные

Конический хвостовик и открытый центр





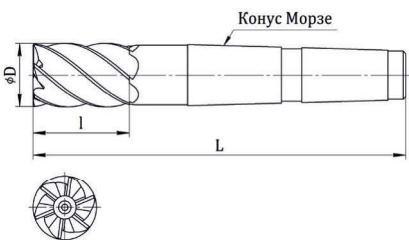
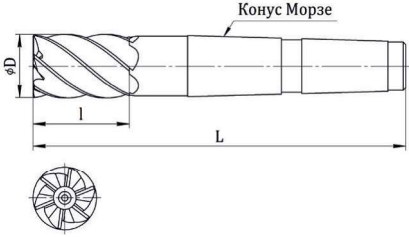
Схема	Обозначение	D	I	L	KM	z
	С нормальным зубом					
	УК 524-10-22-92-KM1	10	22	92	1	4
	УК 524-11-22-92-KM1	11	22	92	1	4
	УК 524-12-26-96-KM1	12	26	96	1	4
	УК 524-12-26-111-KM2	12	26	111	2	4
	УК 524-14-26-96-KM1	14	26	96	1	4
	УК 524-14-26-111-KM2	14	26	111	2	4
	УК 524-16-32-117-KM2	16	32	117	2	4
	УК 524-18-32-117-KM2	18	32	117	2	4
	УК 524-20-38-123-KM2	20	38	123	2	5
	УК 524-20-38-140-KM3	20	38	140	3	5
	УК 524-22-38-123-KM2	22	38	123	2	5
	УК 524-22-38-140-KM3	22	38	140	3	5
	УК 524-25-45-147-KM3	25	45	147	3	5
	УК 524-28-45-147-KM3	28	45	147	3	5
	УК 524-28-45-170-KM4	28	45	170	4	5
	УК 524-30-53-155-KM3	30	53	155	3	5
	УК 524-30-53-178-KM4	30	53	178	4	5
	УК 524-32-53-155-KM3	32	53	155	3	6
	УК 524-32-53-178-KM4	32	53	178	4	6
	УК 524-36-53-155-KM3	36	53	155	3	6
	УК 524-36-53-178-KM4	36	53	178	4	6
	УК 524-40-63-188-KM4	40	63	188	4	6
	УК 524-40-63-221-KM5	40	63	221	5	6
УК 524-45-63-188-KM4	45	63	188	4	6	
УК 524-45-63-221-KM5	45	63	221	5	6	
УК 524-50-75-200-KM4	50	75	200	4	6	
УК 524-50-75-233-KM5	50	75	233	5	6	
УК 524-56-75-200-KM4	56	75	200	4	8	
УК 524-56-75-233-KM5	56	75	233	5	8	
УК 524-63-90-248-KM5	63	90	248	5	8	

Схема	Обозначение	D	l	L	KM	z
	С крупным зубом					
	УК 525-10-22-92-KM1	10	22	92	1	3
	УК 525-11-22-92-KM1	11	22	92	1	3
	УК 525-12-26-96-KM1	12	26	96	1	3
	УК 525-12-26-111-KM2	12	26	111	2	3
	УК 525-14-26-96-KM1	14	26	96	1	3
	УК 525-14-26-111-KM2	14	26	111	2	3
	УК 525-16-32-117-KM2	16	32	117	2	3
	УК 525-18-32-117-KM2	18	32	117	2	3
	УК 525-20-38-123-KM2	20	38	123	2	3
	УК 525-20-38-140-KM3	20	38	140	3	3
	УК 525-22-38-123-KM2	22	38	123	2	3
	УК 525-22-38-140-KM3	22	38	140	3	3
	УК 525-25-45-147-KM3	25	45	147	3	3
	УК 525-28-45-147-KM3	28	45	147	3	3
	УК 525-28-45-170-KM4	28	45	170	4	3
	УК 525-30-53-155-KM3	30	53	155	3	4
	УК 525-30-53-178-KM4	30	53	178	4	4
	УК 525-32-53-155-KM3	32	53	155	3	4
	УК 525-32-53-178-KM4	32	53	178	4	4
УК 525-36-53-155-KM3	36	53	155	3	4	
УК 525-36-53-178-KM4	36	53	178	4	4	
УК 525-40-63-188-KM4	40	63	188	4	4	
УК 525-40-63-221-KM5	40	63	221	5	4	
УК 525-45-63-188-KM4	45	63	188	4	4	
УК 525-45-63-221-KM5	45	63	221	5	4	
УК 525-50-75-200-KM4	50	75	200	4	4	
УК 525-50-75-233-KM5	50	75	233	5	4	
УК 525-56-75-200-KM4	56	75	200	4	5	
УК 525-56-75-233-KM5	56	75	233	5	5	
УК 525-63-90-248-KM5	63	90	248	5	5	
Группа применения						
P	M	K	N	S	H	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
ТУ 25.73.40-044-36293294-2019						